


# Fuel Stirrer

## Part #MF3513S


for Models 3500P, 3500L, 3502, 7500



- Unplug unit
- Open access door.

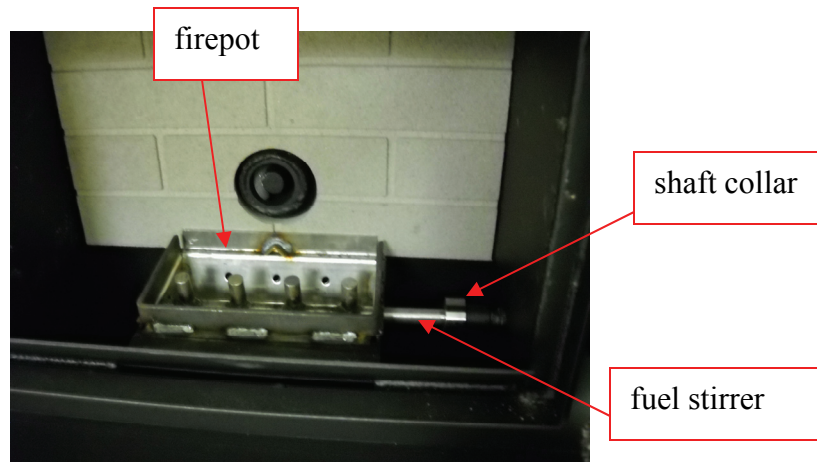

- Remove firepot, fuel stirrer and shaft collar. Slide shaft collar to the right. Making sure the fuel stirrer drive shaft is in the up position pull the firepot, fuel stirrer and shaft collar up to remove.

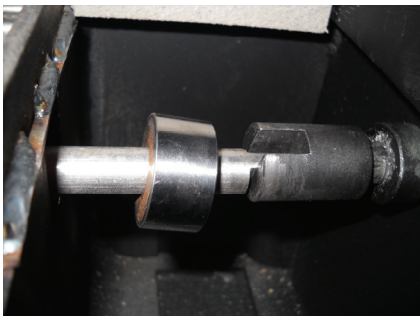

- Insert the fuel stirrer into firepot and push it all the way in until it touches the stop tab.

stop tab



- Once in proper placement, rotate the fuel stirrer in the firepot. Ensure the fingers of the fuel stirrer do not touch the inner radius of the firepot.


- Place firepot, fuel stirrer and coupler into the cradle. Ensure all parts line up on a central axis with the fuel stirrer drive shaft. Slide the couple over the drive shaft.



- Push fuel stirrer drive shaft and fuel stirrer all the way to the left until the end of the fuel stirrer touches the fuel stirrer stop tab.



- Move the 2 shafts in opposite direction until this gap is about 1/8".
- Push the collar against the firebox wall and tighten it.

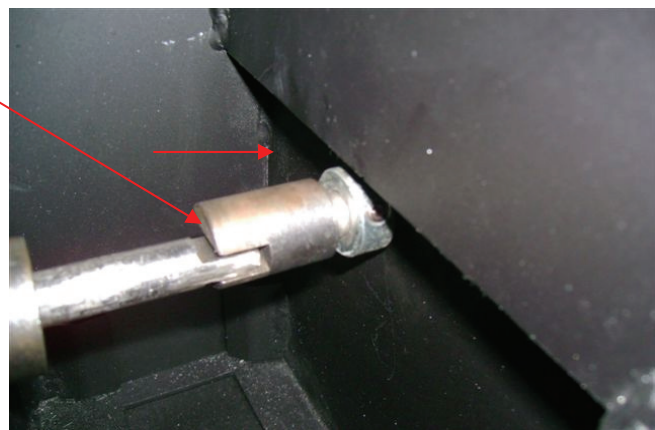

- Plug unit in.
- Restart unit.