


Igniter solid core 200W


Part #PP-664

used on Crossfire Flex, Crossfire pellet units



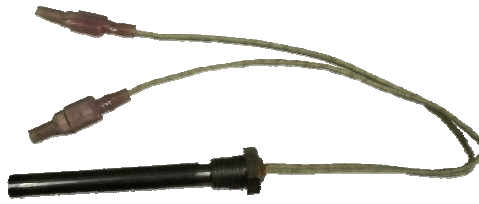


- Turn off power on control panel and unplug from the power supply.

- Disconnect igniter wire from wire harness.
- Remove existing igniter using 5/8" wrench.
- Replace with new igniter do not over tighten.

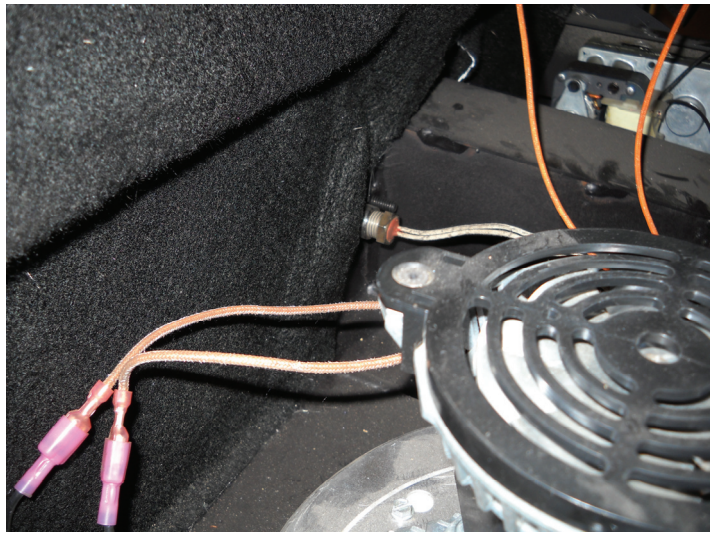

- Connect wire from igniter to wire harness leads.

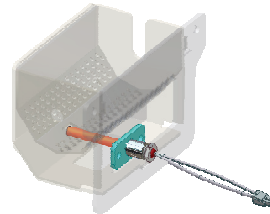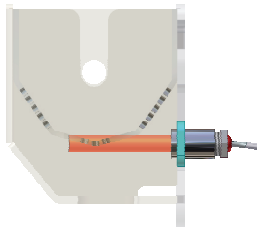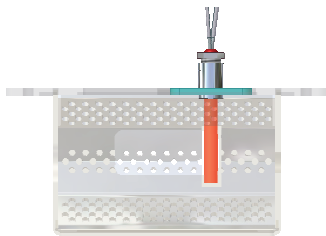

- USE CAUTION WHEN INSTALLING THE BURN-POT AS TO NOT BEND THE IGNITER OUT OF ALIGNMENT. CONTACT BETWEEN THE IGNITER AND BURN-POT SCREEN WILL SIGNIFICANTLY DECREASE BOTH THE LIFE AND PERFORMANCE OF THE IGNITER.
- Plug into power supply

- Turn power on control panel and restart.