


# Wire Harness Assembly


## Part #PP-1035

For Models LR01 (2011 to present)

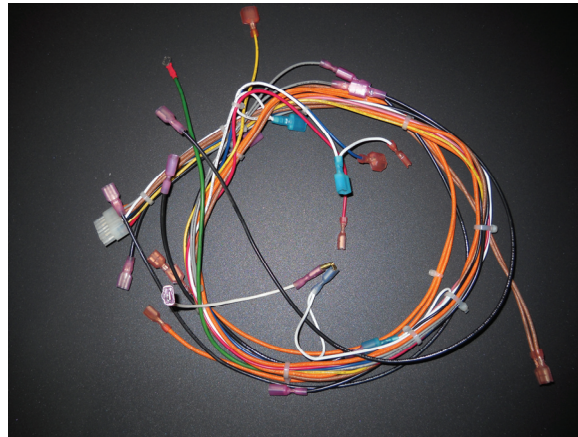

- Unplug unit
- Open both side panels.
- Remove existing wire harness.
- Attach the following:
  - Control Board

molex connector and black lead to terminal

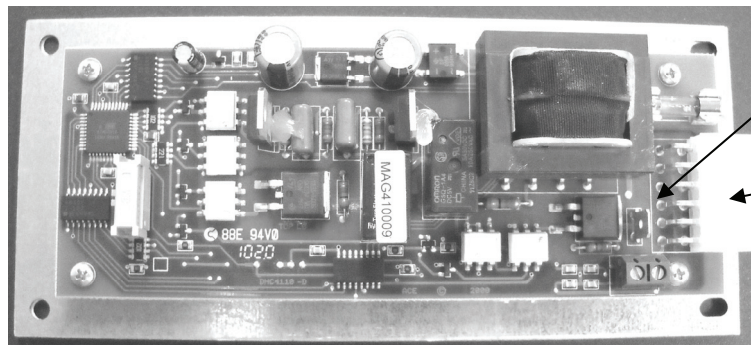

Fuel stirrer lead terminal

molex

- Snap disc right side not used
- Exhaust Fan white wire to one lead blue wire to one lead
- High Limit Snap Disk two orange wires to both leads
- Vacuum Pressure Switch two grey wires to both leads top terminal and middle terminal
- Proof of Fire Snap Disk two brown wires to both leads
- Auger Motor white wire to one lead yellow wire to one lead
- Room Air Fan double white wires to one lead pink wire to one lead
- Electrical Plug double white wires middle terminal black wire bottom terminal  
green wire to top terminal other end of green wire screwed to base of unit
- Igniter red wire to one lead white wire to one lead
  - (these are not plugged into anything if there is not an igniter)

- Plug unit in
- Turn on unit

LR-01 MODEL WIRING DIAGRAM  
 WARNING: DISCONNECT POWER BEFORE SERVICING THIS UNIT.

