


# Installation Instruction for a CF04 Shroud

## Part #CF04-9210

For Models Crossfire Inserts units

- Remove from box and verify all parts prior to installation.
  - (3) metal trim panels
  - (3) pieces of trim (black or gold)
  - (2) PP-1271 angle corners bracket
  - (1) PP-220 roll of insulation

- Install both the left and right side panels over the mounting studs on the stove (as shown). Fasten in place with the ¼-20 nuts and washers installed on the insert.
- You must open the Insert's side access doors to fasten Shroud side panels in place on the unit's base.
- Install the top shroud panel over the front of the side panels (as shown). Make sure the exterior corners of the shroud panels meet prior to tightening all hardware.

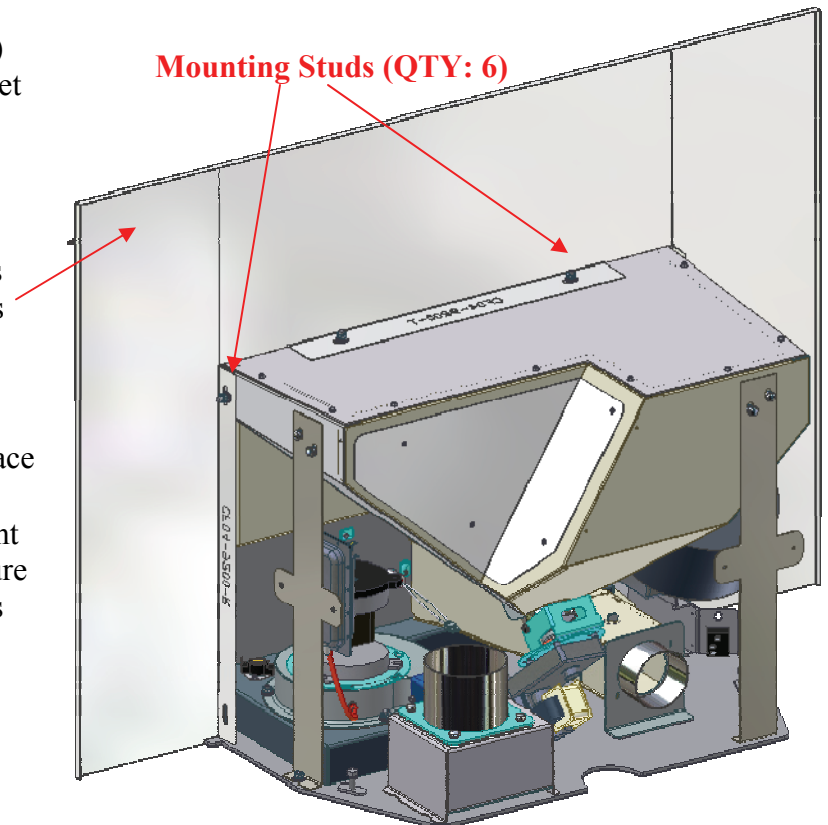

- Install the corner fasteners into the trim pieces as shown, typical both ends.
- Slide the trim assembly over the shroud mounting flange (as shown). Align the corners as required for proper fit; tighten set screws at both ends of each corner to secure into place.
- Push Crossfire w/ shroud assembly flush against fireplace face. Install insulation roll for proper seal.

