


Wire Harness Assembly

Part #PP-1030

For Models LR-01, HR-01 & CF04 Corn (prior to 2011)

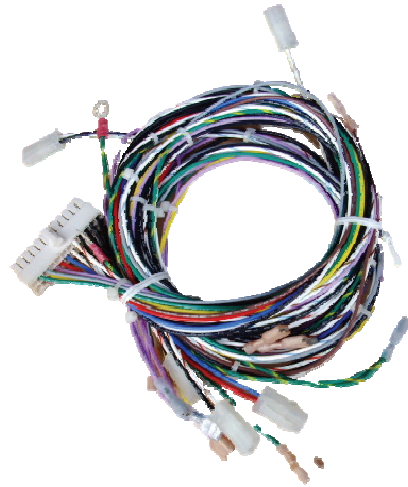

- Unplug unit.
- Open both side panels.
- Remove existing wire harness.
- Attach the following:
 - Control Board molex connector
 - Fuel Stirrer motor red & black molex to black leads
 - Exhaust Fan gray/white & black molex to black leads
 - Auger Motor brown/white & black to black leads
 - Room Air Fan blue/white & black molex to black leads
 - Vacuum Pressure Switch green lead to top terminal violet lead to bottom terminal
 - High Limit Snap Disk gray lead to top terminal violet to bottom terminal
 - all white snap disk
 - Snap disc right side yellow wire to top terminal violet wire to bottom terminal
 - yellow & white snap disk
 - Proof of Fire Snap Disk brown wire to top terminal violet wire to bottom terminal
 - located by exhaust motor yellow & white snap disk
 - Electrical Plug double white wires middle terminal black wire bottom terminal
 - green wire to top terminal other end of green wire screwed to base of unit
 - Igniter red wire to one lead white wire to one lead
 - thermostat blue lead and red lead (these are not used if NO thermostat)
- Plug unit in
- Turn on unit

