


Wire Harness Assemble DC

Part #RP2062


for Models Baby DC, Win DC, Essex DC & T40 DC

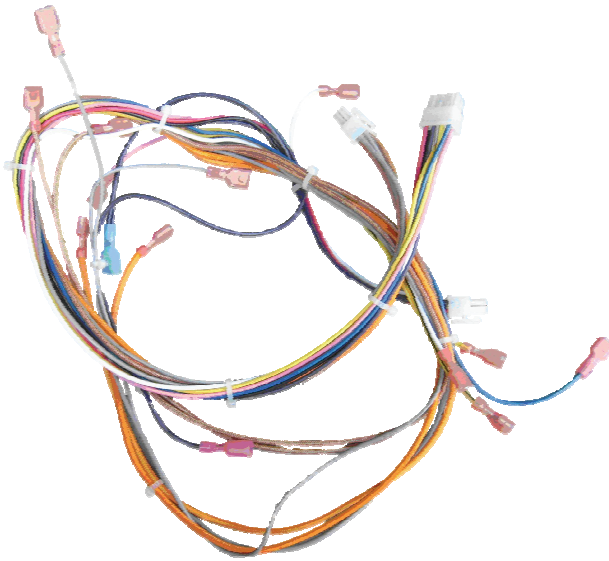

- Unplug unit
- Open both side panels.
- Remove existing wire harness.
- Attach the following:
 - Control Board
 - Exhaust Fan
 - High Limit Snap Disk
 - Vacuum Pressure Switch


molex connector (6 prong and 8 prong)
blue wire to red lead purple wire to blue lead
(depending on style fan white to blue wire black to purple wire)
two orange wires to both leads
two grey wires to both leads

RT080 Clark Controls
Vacuum Pressure Switch

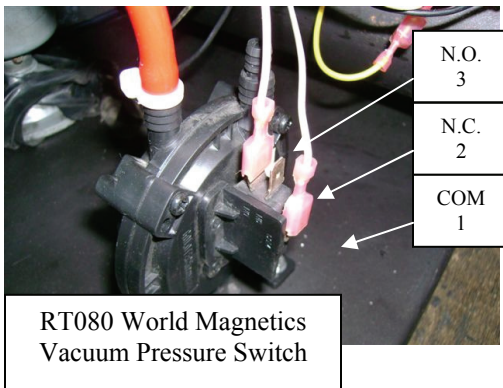

Attach one grey wire to 'Com 1'
and one grey wire to 'NO 3'.
Attached hose to back
connection 'L'.

Attach one grey wire to 'Com 1'
and one grey wire to 'NO 3'.
Attached hose to bottom connection
'P2'.

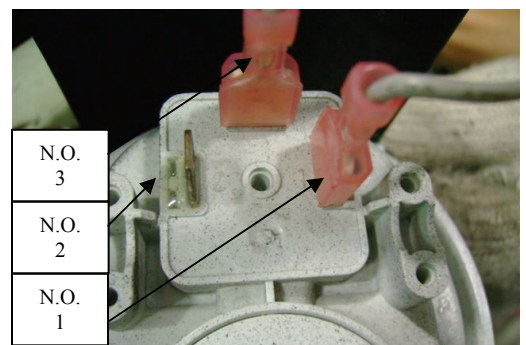

- Proof of Fire Snap Disk
 - Auger Motor
 - Room Air Fan
 - Electrical Plug
 - Igniter
 - (these are not plugged into anything if there is not an igniter)
- two brown wires to both leads
yellow wire to top terminal w/ red dot (+) yellow/black wire to bottom terminal (-)
pink wire to red lead one purple double to black lead
molex connector to power supply (5 prong)
red/white wire to one lead white wire to one lead

DC MODEL DDC-3000 WIRING DIAGRAM

WARNING: DISCONNECT POWER BEFORE SERVICING THIS UNIT

