

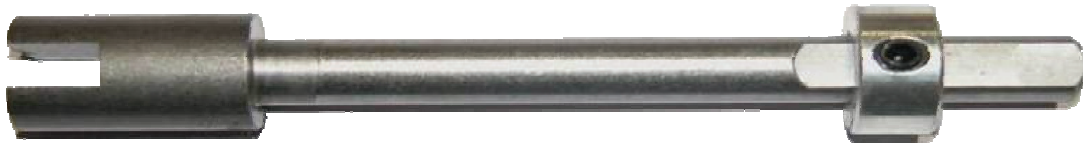


# MF3514 Fuel Stirrer Drive Shaft

All Magnum Countryside units and 7500 (from 2001 to present)

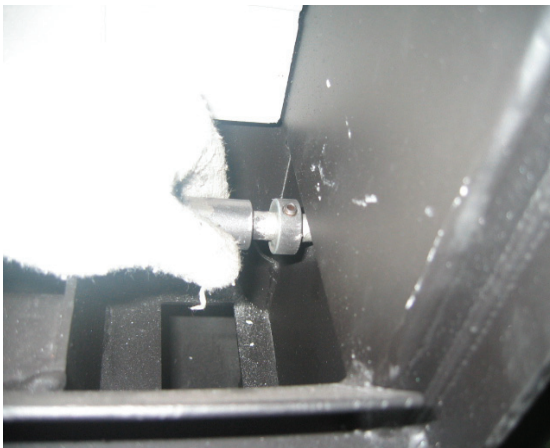

- Remove from packaging.
- Turn off power on control panel and unplug from the power supply.
- Open right side panel.
- Remove firepot assemble.
- Remove the drive sprocket.
- Slide the drive shaft out.
- Replace fuel stirrer drive shaft with new shaft that has been lightly brushed with Hi-temp grease then slide the collar onto the shaft.
- Slide the shaft and collar into the hole.

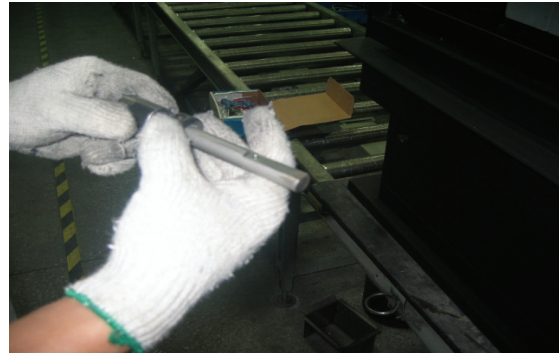

- Slide on the auger motor by aligning the flat shaft on the auger to the Allen screw on shaft collar and then tighten the set screw on the collar.
- The fuel stirrer /stirrer drive shaft should have about 1/8" lateral movement when fully assembled. The stop tab can be adjusted to provide 1/16" movement if necessary. This is done by bending the tab in or out 1/32" maximum to assist with fit and function. IF this does not work, remove and re-install FIREPOT/FUEL STIRRER.
- Tighten the set screw on sprocket.
- Close side panel.
- Restart unit.

